ShoreTel IP Phone 480/480g Quick Reference

PHONE OPERATION

Place Calls

Use the speakerphone or a headset



Use the Directory



Make a conference call (while on a call)



Make a call from History



Use the Intercom (through Directory)



Answer Calls

Answer a call

Lift handset or **Answer** or (**(**▶))

Send a call to voicemail



Divert an incoming call



Adjust volume of handset, headset, or speakerphone when off hook; adjust ringer volume when on hook



Answer call waiting (incoming call)

Press green blinking call appearance button or **Answer**

Pick up a call for another extension

Pickup + Ext.

Interact with Calls

Mute a call



Place a call on hold

or press call appearance button

Take a call off hold

or press orange blinking call appearance button Hold

Transfer a call



Join calls

Join

Park a call on another extension


Park + Ext.

Unpark a call

Unpark + Ext.

VOICEMAIL

Check visual voicemail

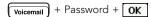

Log in to voicemail main menu



Log in to voicemail from another extension

Dial your Ext.+ Press * during greeting + Password + #

PHONE NUMBER ASSIGNMENT

+ Unassign user + Unassign + Unassign Options Unassign user

Assign a phone number to a phone

Next Phone number + + Password + **OK**

CUSTOMIZE YOUR PHONE

Set do-not-disturb mode



Options

Set call-forwarding options



Change automatic off-hook setting

Set headset type



Edit

Select a ringtone



Turn ringer on or off



Set handsfree mode



Change time zone



TROUBLESHOOTING

View phone information



Reboot your phone



Call the Help Desk




Note: For details about using the phone, see the ShoreTel IP Phone 480/480q User Guide.



Exit

Exit

ShoreTel IP Phone 480/480g Quick Reference

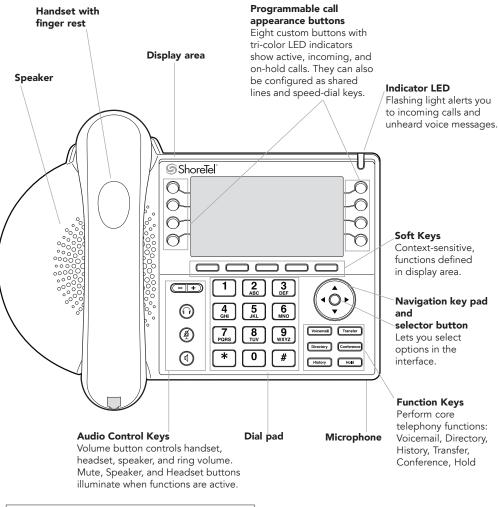

Note: You can connect supported headsets to the IP Phone 480/480q via the headset jack on the back of the phone.

GUIDE TO LEDS

Your ShoreTel 480/480q IP phone provides color cues to help you determine call appearance status:

- Steady Green: The phone is in use (dialing or off hook).
- Blinking Green: Incoming call
- Blinking Orange: The call is on hold or parked.
- Steady Orange: The extensions's call mode is set to Do Not Disturb.
- Steady Red: The shared line is in use by the other party.

GUIDE TO STATUS ICONS

Main Display





Standard Mode

Do Not Disturb (DND) Mode

Call Appearance

Idle, On Hook

Off Hook, Dialing

Inactive / Do Not Disturb

Incoming Call

Connected Call

Connected Conference Call

On Hold

Speed Dial Extension

Shared Line

Shared Line

Incoming Call

On a Call

Call History

Inbound Call

Outgoing Call

Missed Call